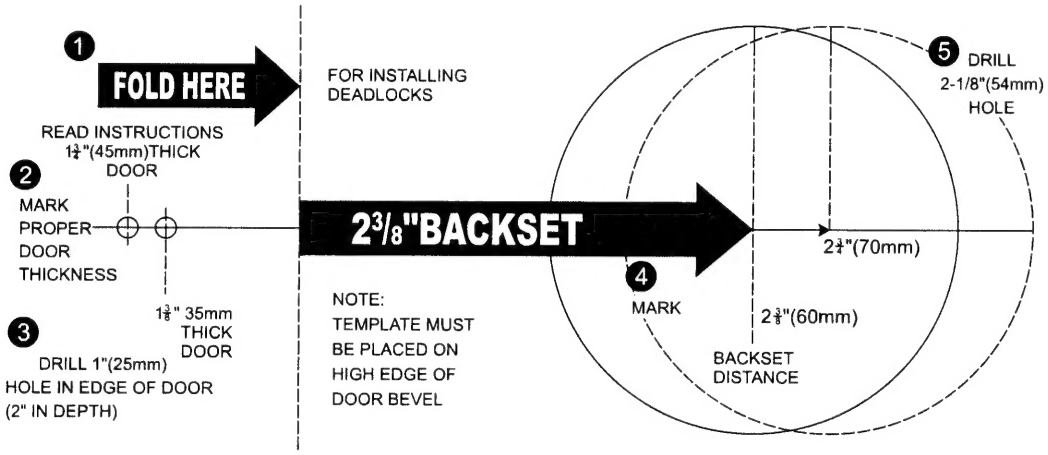
1
FOLD HERE
READ INSTRUCTIONS
1¾"(45mm)THICK
DOOR
2
MARK
PROPER
DOOR
THICKNESS
1⅜" 35mm
THICK
DOOR
3
DRILL 1"(25mm)
HOLE IN EDGE OF DOOR
(2" IN DEPTH)
FOR INSTALLING
DEADLOCKS
2⅜"BACKSET
NOTE:
TEMPLATE MUST
BE PLACED ON
HIGH EDGE OF
DOOR BEVEL
4
MARK
2¾"(70mm)
2⅜"(60mm)
BACKSET
DISTANCE
5
DRILL
2-1/8"(54mm)
HOLE